

Product data sheet






Information


DesignationARSIS straight grab bar, 600 mm, Bright Anodized AluminiumReference049661

Product advantages

- + Elliptic tube for an improved grip.
- + Elegant and design shape.
- + Corrosion resistant warranty.

Description

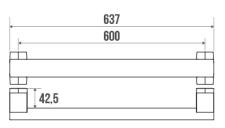



Elliptical tube in bright anodized aluminium 38 x 25 mm. Chrome-plated resin flanges.

Wall fixings included. Design coordinated with all ARSIS items. Perfectly suitable for use in the hospitality industry.

Technical characteristics

Finish	Anodized
Dimensions	600 mm
Diameter Ø	38 x 25 mm
Material	Aluminum
Gross weight	0.620 kg
Packaging	Plastic protection bag + Hanger for display
CE Marking : safe load	150 kg
Laboratory tests	225 kg
Made in France	yes
Maintenance	yes

PELLET ASC - ZI DE CHAPOTIN - 240 RUE DES FRÈRES VOISIN - CS 270048 - 69967 CHAPONNAY CEDEX - FRANCE - TEL : +33 (0)4 78 96 82 20 - FAX : +33 (0)4 78 96 70 52

© PELLET ASC – Non contractual document. Please read our General Sales Conditions. Dimensions in mm.

All dimensions and specifications are given for information purposes only and can be changed without notice in order to improve our products.



Guarantee Net weight Gencod Custom code Technical sheet Spare parts 10 years 0.545 kg 3563390496619 761520000 <u>A04984002_IND_11</u> Réf. 049006 : Cache-fixation chromé, Réf. 049007 : Support de fixation alu chromé

Fixing and maintenance advices

Recommended height for the horizontal part : 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the grab bar as a step. DO NOT sit on or hang from the grab bar.

Fiche produit mise à jour le : 10/01/2024