

Product data sheet





Information

Designation Arsis Two-walls corner shower bar, Anthracite grey Epoxy-coated


Aluminium

Reference 049725

Product advantages

- + Elliptic tube for an improved grip.
- + Adjustable: convertible into a T or L shape, for all configurations.
- + With 2 brackets for shower handset : sliding and fixed rotating.
- + Make stepping into or out of the shower easier.

Description

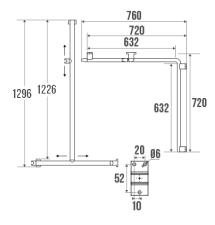

Elliptical tube in anthracite grey epoxy-coated aluminium, 38 x 25 mm.

Anthracite grey synthetic resin cover plates.

Reversible : 3rd point to be fitted for right or left version.

Adjustable: convertible into T or L shape at assembly stage. Once settled, the positioning remains fixed.

1 slider bracket on the vertical bar to ease the catch in hand of the shower handset. 1 fixed and rotating bracket on the horizontal bar to enable people while sitting to have a shower without any difficulty.

Concealed fixing.

Anticorrosion warranty.

Delivered dismantled.

Wall fixings included.

Design coordinated with the items of the Arsis Comfort range.

Perfectly suitable for use in the hotel industry.

Technical characteristics

Finish Color

Dimensions

Diameter Ø

Material

Gross weight

Packaging

CE Marking : safe load Laboratory tests Epoxy-coated

Anthracite grey

1296 x 720 x 720 mm

38 x 25 mm

Aluminum

2.600 kg

Cardboard box

150 kg

225 kg





Made in France yes
Maintenance yes

 Guarantee
 10 years

 Gencod
 3563390497258

 Custom code
 7615200000

 Technical sheet
 A04982007_IND_10

Spare parts Ref. 049007 : Chrome-plated aluminium wall bracket, Ref. 049008 : White cover plates

Fixing and maintenance advices

Recommended height for the horizontal part: 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the grab bar as a step. DO NOT sit on or hang from the grab bar.

Fiche produit mise à jour le : 10/01/2024