

# Product data sheet






#### Information

DesignationHinged bar with integrated support prop - 600 mmReference048661

#### **Product advantages**

- + Elliptic tube for an improved grip.
- + Soft close system.
- + Help to get up and stand.
- + Safe: support prop with automatic lock in support position.

#### Description

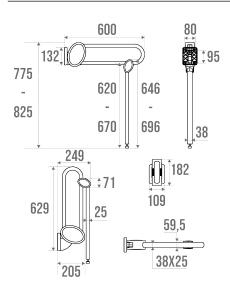

Elliptical tube 38 x 25 mm in white epoxy-coated aluminium. Wall flange, cover plate, joint and side plates in white chrome-plated synthetic resin.

- With integrated support prop, adjustable height.
- Removable: add the "click and fit" plate kit, ref 044110.
- Wall fixings included. Concealed fixings.
- Design coordinated with all ARSIS Comfort items.
- Perfectly suitable for use in the hospitality industry.

## **Technical characteristics**

Finish	Epoxy-coated
Color	White
Dimensions	600 mm
Diameter Ø	38 x 25 mm
Material	Aluminum
Gross weight	3.200 kg

PELLET ASC - ZI DE CHAPOTIN - 240 RUE DES FRÈRES VOISIN - CS 270048 - 69967 CHAPONNAY CEDEX - FRANCE - TEL : +33 (0)4 78 96 82 20 - FAX : +33 (0)4 78 96 70 52

© PELLET ASC – Non contractual document. Please read our General Sales Conditions, Dimensions in mm.

All dimensions and specifications are given for information purposes only and can be changed without notice in order to improve our products.



Packaging	
Maximum Weight Capacity	
Laboratory tests	
Made in France	
Maintenance	
Guarantee	
Net weight	
Gencod	
Custom code	
Technical sheet	

Cardboard box + Label 150 kg 225 kg yes yes 10 years 3.300 kg 3563390486610 7615200000 A04866100\_IND\_02

### Fixing and maintenance advices

Recommended height for the horizontal part : 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the grab bar as a step. DO NOT sit on or hang from the grab bar.

Fiche produit mise à jour le : 10/01/2024