

Product data sheet



Page 1/2



Information


Designation Hinged bar with integ Reference 048879

Hinged bar with integrated support prop - 770 mm 048879

Product advantages

- + Raised position locking.
- + Reinforced aluminium tube.
- + Help to get up and stand.
- + Support prop with adjustable height.

Description

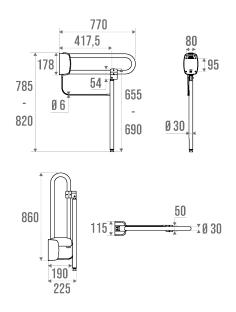

White epoxy-coated aluminium tube Ø 30 mm. Synthetic resin flange. With integrated support prop, adjustable height with a system of jack. Concealed fixings. Corrosion-resistant warranty.

Technical characteristics

Finish	Epoxy-coated
Color	White
Dimensions	770 mm
Diameter Ø	30 mm
Material	Aluminum

PELLET ASC - ZI DE CHAPOTIN - 240 RUE DES FRÈRES VOISIN - CS 270048 - 69967 CHAPONNAY CEDEX - FRANCE - TEL : +33 (0)4 78 96 82 20 - FAX : +33 (0)4 78 96 70 52

© PELLET ASC – Non contractual document. Please read our General Sales Conditions. Dimensions in mm. All dimensions and specifications are given for information purposes only and can be changed without notice in order to improve our products.



Gloss weight	
Packaging	
Maximum Weight Capacity	
Laboratory tests	
Made in France	
Maintenance	
Guarantee	
Net weight	
Gencod	
Custom code	
Technical sheet	

Gross weight

3.100 kg Cardboard box + Label 120 225 kg yes yes 10 years 2.150 kg 3563390488799 7615200000 <u>S00002226 IND 01</u>

Fixing and maintenance advices

Recommended height for the horizontal part : 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the grab bar as a step. DO NOT sit on or hang from the grab bar.

Fiche produit mise à jour le : 10/01/2024