

# Product data sheet




#### Information

Designation Reference 2-walls corner grab bar, White Polyalu 046640

## Product advantages

- + Make stepping into or out of the shower easier.
- + Possible to fit it "to the right" or "to the left".
- + .
- + With slider bracket shower handset.
- + Concealed fixings.
- + Anticorrosion warranty.

#### Description

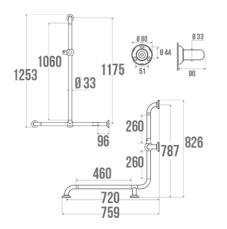

Composite material: White synthetic resin + aluminium profile. Tube Ø 33 mm. With shower rail slider bracket. 90° angled. White flange border and central body. Concealed fixings. Screws included Delivered unassembled.

### **Technical characteristics**

Dimensions 1253 x 826 x 759 mm
Diameter Ø 33 mm
Material Polyamide (Nylon)
Gross weight 3.600 kg
Packaging Cardboard box

PELLET ASC - ZI DE CHAPOTIN - 240 RUE DES FRÈRES VOISIN - CS 270048 - 69967 CHAPONNAY CEDEX - FRANCE - TEL : +33 (0)4 78 96 82 20 - FAX : +33 (0)4 78 96 70 52

© PELLET ASC – Non contractual document. Please read our General Sales Conditions. Dimensions in mm. All dimensions and specifications are given for information purposes only and can be changed without notice in order to improve our products.



Maximum Weight Capacity
Laboratory tests
Made in France
Maintenance
Guarantee
Net weight
Gencod
Custom code
Technical sheet
Spare parts

150 kg 225 kg yes yes 10 years 2.800 kg 3563390466407 761520000 S00001190\_IND\_08 Ref. 046100, Polyalu cover plate.##Ref. 046101, Bag of 3 stainless steel screws.##Ref. 046288, Flange, cover plate and fixings.

#### Fixing and maintenance advices

Recommended height for the horizontal part : 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the grab bar as a step. DO NOT sit on or hang from the grab bar.

Fiche produit mise à jour le : 07/05/2024