

# Product data sheet






### Information

Designation Reference 600 mm antibacterial straight grab bar 490160

## Product advantages

- + Reducing bacteria up to 99 %
- + Improving products hygiene.
- + Minimizing cross-contamination

Description

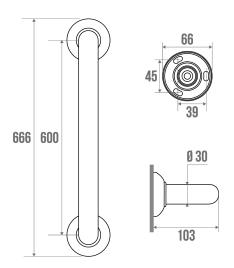

#### Concealed fixings.

White epoxy-coated aluminium tube Ø 30 mm. White polymeer flanges Ø 66 mm. Antibacterial treatment reducing bacteria up to 99 %. Perfectly suitable with the Durofort antibacterial accessories.

## **Technical characteristics**

Finish	Epoxy-coated
Color	White
Dimensions	600 mm
Diameter Ø	30 mm
Material	Aluminum
Gross weight	0.720 kg
Packaging	Plastic protection bag + Hanger for display
Maximum Weight Capacity	150 kg
Laboratory tests	225 kg

PELLET ASC - ZI DE CHAPOTIN - 240 RUE DES FRÈRES VOISIN - CS 270048 - 69967 CHAPONNAY CEDEX - FRANCE - TEL : +33 (0)4 78 96 82 20 - FAX : +33 (0)4 78 96 70 52

© PELLET ASC – Non contractual document. Please read our General Sales Conditions. Dimensions in mm.

All dimensions and specifications are given for information purposes only and can be changed without notice in order to improve our products.



Made in France	yes
Maintenance	yes
Guarantee	10 years
Net weight	0.680 kg
Gencod	3563394901607
Custom code	7615200000
Technical sheet	No technical sheet available

### Fixing and maintenance advices

Recommended height for the horizontal part : 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the grab bar as a step. DO NOT sit on or hang from the grab bar.

Fiche produit mise à jour le : 10/01/2024