

Product data sheet






Information

Designation Reference L-shaped shower bar, 664.5 x 1264.5 mm, White Polyalu, tube Ø 33 mm 046280

Product advantages

- + Help to get up and stand.
- + With slider bracket shower handset.
- + Possible to fit it "to the right" or "to the left".
- + Concealed fixings.

Description

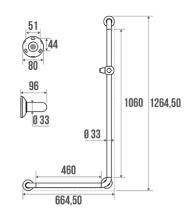

Composite material: White synthetic resin + aluminium profile. Tube Ø 33 mm. With shower rail slider bracket. White flange border and central body. Concealed fixings. Delivered unassembled. Allows either right or left-handed configuration.

Stainless steel fixing screws included.

Technical characteristics

Color	White
Dimensions	664.5 x 1264.5 mm
Diameter Ø	33 mm
Material	Polyalu
Gross weight	1.250 kg
Packaging	Cardboard box
Maximum Weight Capacity	150 kg
Laboratory tests	225 kg
Made in France	yes

PELLET ASC - ZI DE CHAPOTIN - 240 RUE DES FRÈRES VOISIN - CS 270048 - 69967 CHAPONNAY CEDEX - FRANCE - TEL : +33 (0)4 78 96 82 20 - FAX : +33 (0)4 78 96 70 52

© PELLET ASC – Non contractual document. Please read our General Sales Conditions. Dimensions in mm.

All dimensions and specifications are given for information purposes only and can be changed without notice in order to improve our products.



Maintenance Guarantee Gencod Custom code Technical sheet Spare parts yes 10 years 3563390462805 761520000 <u>\$00001876 IND 04</u> Ref. 046100, Polyalu cover plate. Ref. 046101, Bag of 3 stainless steel screws. Ref. 046288, Flange, cover plate and fixings.

Fixing and maintenance advices

Recommended height for the horizontal part : 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the grab bar as a step. DO NOT sit on or hang from the grab bar.

Fiche produit mise à jour le : 10/01/2024