

Product data sheet





Information


Designation Reference

ARSIS hinged bar, 770 mm, Anthracite grey Epoxy-coated Aluminium 048780

Product advantages

- + Soft close system.
- + Elliptic tube for an improved grip.

Description

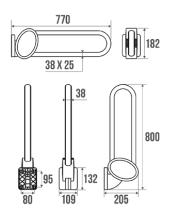

Concealed fixings.

Elliptical tube 38 x 25 mm in anthracite grey epoxy-coated aluminium. Wall flange, joint and side plates in Bright chrome-plated synthetic resin.

Wall fixings included. Design coordinated with all ARSIS Comfort items. Perfectly suitable for use in the hospitality industry.

Technical characteristics

Finish	Epoxy-coated
Color	Anthracite grey
Dimensions	770 mm
Diameter Ø	38 x 25 mm
Material	Aluminum
Gross weight	2.500 kg
Packaging	Cardboard box + label
CE Marking : safe load	120 kg
Laboratory tests	180 kg
Made in France	yes
Maintenance	yes
Guarantee	10 years

PELLET ASC - ZI DE CHAPOTIN - 240 RUE DES FRÈRES VOISIN - CS 270048 - 69967 CHAPONNAY CEDEX - FRANCE - TEL : +33 (0)4 78 96 82 20 - FAX : +33 (0)4 78 96 70 52

© PELLET ASC – Non contractual document. Please read our General Sales Conditions. Dimensions in mm. All dimensions and specifications are given for information purposes only and can be changed without notice in order to improve our products.



Gencod Custom code Technical sheet 3563390487808 7615200000 A48960812_IND_04

Fixing and maintenance advices

Recommended height for the horizontal part : 800 mm from the ground. Hinged bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the hinged bar as a step. DO NOT sit on or hang from the grab bar. On wall not strong enough, 3 solutions: the free-standing pole ref: 048400, the support prop ref: 048710 or you can also install a backplate behind the wall.

Fiche produit mise à jour le : 10/01/2024

PELLET ASC - ZI DE CHAPOTIN - 240 RUE DES FRÈRES VOISIN - CS 270048 - 69967 CHAPONNAY CEDEX - FRANCE - TEL : +33 (0)4 78 96 82 20 - FAX : +33 (0)4 78 96 70 52