

Product data sheet






Information

Designation

Reference

U-shaped bar, 525 x 200 mm, White Epoxy-coated Aluminium , tube Ø 30 mm 049380

Description

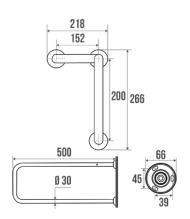

Delivered unassembled. Allows either right or left-handed configuration. White epoxy-coated aluminium tube. White resin cover plates.

Possibility to fix the toilet roll holder ref. 048820 to this bar. Design coordinated with the TRIOLO range accessories and with the COMFORT and SAFETY items.

Technical characteristics

| Finish | Epoxy-coated |
|-------------------------|------------------------------|
| Color | White |
| Diameter Ø | 30 mm |
| Material | Aluminum |
| Gross weight | 1.010 kg |
| Packaging | Plastic protection bag |
| Maximum Weight Capacity | 140 |
| Laboratory tests | 180 kg |
| Made in France | yes |
| Maintenance | yes |
| Guarantee | 10 years |
| Gencod | 3563390493809 |
| Custom code | 7615200000 |
| Technical sheet | No technical sheet available |

Fixing and maintenance advices

PELLET ASC - ZI DE CHAPOTIN - 240 RUE DES FRÈRES VOISIN - CS 270048 - 69967 CHAPONNAY CEDEX - FRANCE - TEL : +33 (0)4 78 96 82 20 - FAX : +33 (0)4 78 96 70 52

© PELLET ASC – Non contractual document. Please read our General Sales Conditions. Dimensions in mm. All dimensions and specifications are given for information purposes only and can be changed without notice in order to improve our products.



Recommended height for the horizontal part : 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the grab bar as a step. DO NOT sit on or hang from the grab bar.

Fiche produit mise à jour le : 10/01/2024

PELLET ASC - ZI DE CHAPOTIN - 240 RUE DES FRÈRES VOISIN - CS 270048 - 69967 CHAPONNAY CEDEX - FRANCE - TEL : +33 (0)4 78 96 82 20 - FAX : +33 (0)4 78 96 70 52