

# Product data sheet



## Information


Designation Reference

Straight grab bar, 500 mm, Brushed Stainless steel, tube Ø 30 mm 049550

## Product advantages

+ Invisible fasteners.

#### Description

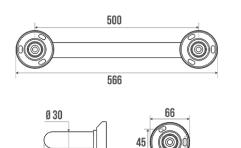

Brushed 304 stainless steel tube Ø 30 mm. One-piece bar. Concealed fixings. Mat chrome-plated resin cover plates Ø 65 mm.

Perfectly suited for use in Institutions. Possibility to fix the toilet roll holder ref. 048820 to this bar.

## **Technical characteristics**

100

Finish	Brushed
Dimensions	500 mm
Diameter Ø	30 mm
Material	Stainless steel
Gross weight	0.610 kg
Packaging	Plastic protection bag + Hanger for display
Maximum Weight Capacity	150 kg
Laboratory tests	225 kg
Made in France	yes
Maintenance	yes
Guarantee	5 years
Gencod	3563390495506
Custom code	7324900010
Technical sheet	A49530801_IND_04

PELLET ASC - ZI DE CHAPOTIN - 240 RUE DES FRÈRES VOISIN - CS 270048 - 69967 CHAPONNAY CEDEX - FRANCE - TEL : +33 (0)4 78 96 82 20 - FAX : +33 (0)4 78 96 70 52

© PELLET ASC – Non contractual document. Please read our General Sales Conditions. Dimensions in mm. All dimensions and specifications are given for information purposes only and can be changed without notice in order to improve our products.



Spécificité

Incompatible dans les milieux chlorés.

#### Fixing and maintenance advices

Recommended height for the horizontal part : 800 mm from the ground. Grab bars provide support and added safety if properly fitted in accordance with our technical instructions. Careful consideration and selection of the appropriate wall fixings according to the wall-mounted support is required to ensure the long life of your accessory. The use of stainless steel screws (Ø 4 mm) is highly recommended to prevent corrosion in damp environment. Before drilling, physically hold the product against the wall at desired position and mark the hole locations. All the fixing points must be respected. After installation and before use, make sure that all fixing screws are tightened securely. DO NOT use the grab bar as a step. DO NOT sit on or hang from the grab bar.

Fiche produit mise à jour le : 10/01/2024